



BLK ARC Backpack

www.scan-go.eu

USER MANUAL

JUNE 2023

Scan&Go srl
Via della Tecnica 34 A/B - 41051
Castelnuovo Rangone (MO) - Italy
Cell. +39 3924627285
info@scan-go.eu

BLK ARC Backpack



This Backpack is designed to be used with BLK ARC laser scanner comfortably on the operator's shoulders, thus leaving the hands free.

The support is made of aluminum tubes, the inclination can be adjusted by the operator allowing to keep the scanner at different heights, Standard Leica pin with locking knob allows 360 ° rotation to orient the scanner in any direction.

Install the upper part of the support by using the supplied knobs.
Adjust the inclination of the tube and the support



Cable kit for BLK ARC

Bracket for BLK ARC with adapters for 5/8" female and 3/8" female



ASSEMBLY AND USE INSTRUCTIONS

Remove the original cable and replace it with the cable supplied with the trolley, loosen the 3 locking screws



Do not wrap the cable around the bottom of the scanner



Mount the bracket by letting the cables enter into the appropriate seats



Place the bracket on the locking screws and slide it to the fixation position



ASSEMBLY AND USE INSTRUCTIONS


Screw the 5/8" female adapter on the pole and mount the instrument



Lock the instrument by screwing the side knob, open the connector cap



Connect the power cable extension and insert it into the battery

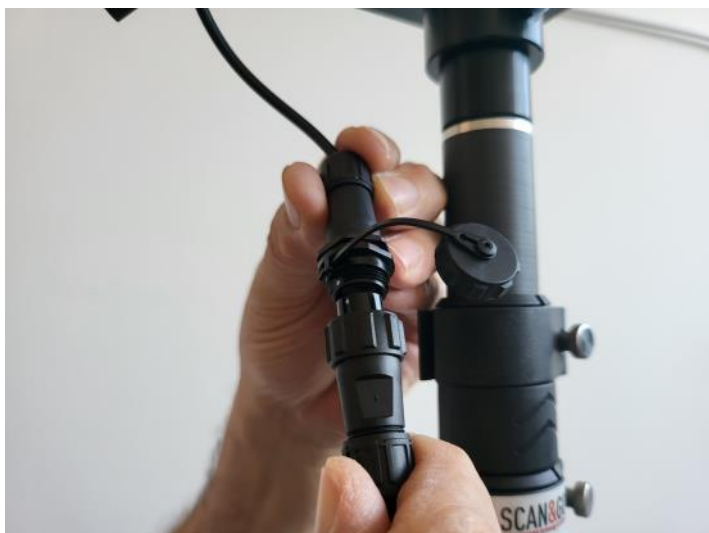

BLK ARC Backpack





NEW surveying technology & solutions



Made in Italy